



Electric Roller Blind


Fitting & Operating Guide

ORDER
BLINDS



When your blind arrives, the motor will be in 'sleep mode'.
Once you have installed the blind, wake it up by following these steps:

Exiting Sleep Mode

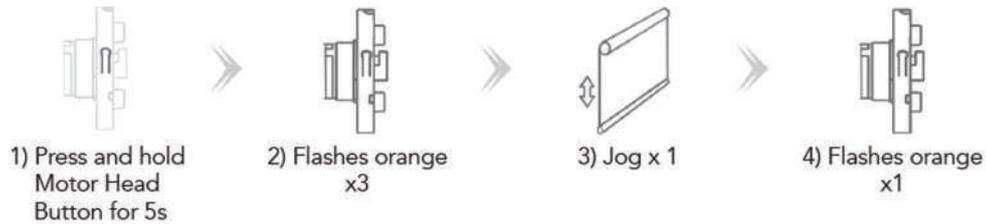

Now your blind is awake, test the remote. The upper and lower limits will already be set for you, but you might want to fine tune them to perfection:

Adjusting Upper Limit



Adjusting Lower Limit




You can also set and save a 'favourite' position at a certain limit:

Setting Favourite Position



Cancelling Favourite Position

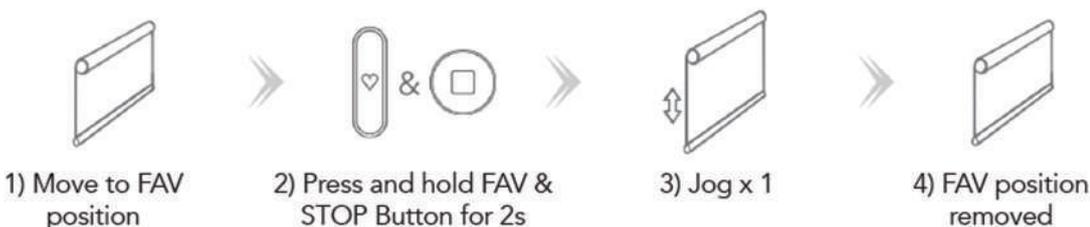

WHAT IS NEEDED

Tape Measure



Drill



Screwdriver



Pencil



Brackets



Screws



IMPORTANT INFORMATION


Be careful when opening packaging so as not to damage the fabric. Depending on the width of your blind, it will be made on either a 32mm or 40mm diameter tube. Depending which it is, you will receive one of two style of bracket as shown above.

Please note, this blind is not suitable for side fixing and should only be top or face fixed.

Before installation, check the material of your window recess or surround – is it plaster, wood, metal or masonry? Each require specific drill bits and rawl plugs to ensure a secure fit. Using the correct tools make installation easier and ensures a secure fit.

FITTING YOUR BLIND

1

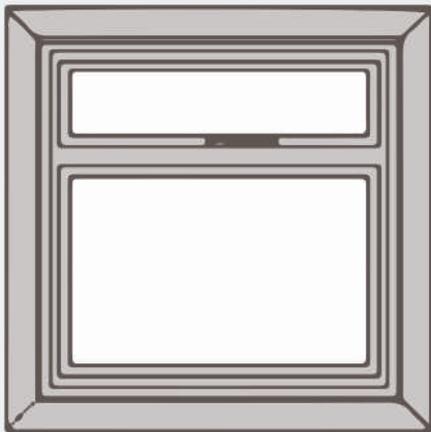


FITTING INSIDE THE RECESS

Firstly decide whether to face fix or top fix your blind.

We recommend you top fix your blind within the recess to avoid drilling into the window frame or its surround.

If there are obstructions like handles, make sure you leave enough space for the blind to be lowered without hitting them.

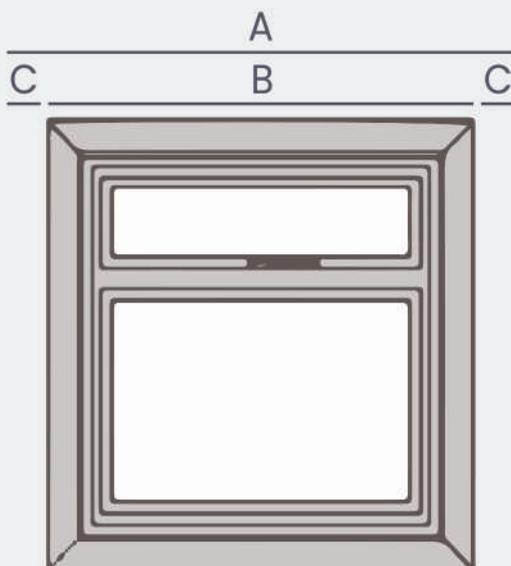

FITTING OUTSIDE OF THE RECESS

Follow these measurement steps to ensure that the centre of your roller blind is exactly in the middle of your window.


The measurements at either end of the recess (C) need to be the same.

To work out measurement C:

- Measure the width of the window (measurement B)
- Measure the width of the blind (measurement A)
- Take measurement B away from measurement A
- Divide the answer by 2 to get measurement C

MARKING THE BRACKET POSITIONS

2

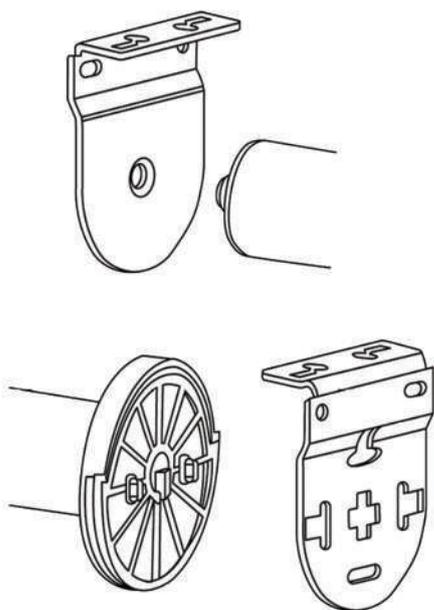

MARK THE BRACKET POSITIONS

Place the blind into the corresponding ends of the brackets as illustrated, then offer the blind into position where you'd like to fix it in your window.

Mark the positions of the two holes per bracket for fixing and drilling.

Use the appropriate wall plugs and use two screws in each bracket ensuring that the brackets are level.

Remember to allow room for the blind to clear any obstacles such as window handles and vents when operated.

FITTING THE BLIND

3

Once your brackets are securely fitted, you can slide on the bracket covers.

Now offer up the blind into the corresponding ends of the brackets.

On standard rolled blinds the fabric rolls off the back closest to the window.

On reverse rolled blinds the fabric rolls off the front into the room.



MOTOR INFORMATION

Each motor can be paired with a maximum of 10 controllers / remotes.

An LED on the motor head will flash 8 times at the start of operation when the battery is running low.

Do not operate the motor when charging.


The motor can run for a maximum of 6 minutes continuously.

When programming the motor, the operator has a 10 second window to complete each stage. If a stage is not carried out within the window, the motor will automatically exit the current mode.

Limits are saved even if the motor runs out of battery or is powered off.

The motor jogs during setup. Allow it to finish before continuing.

REMOTE LAYOUT

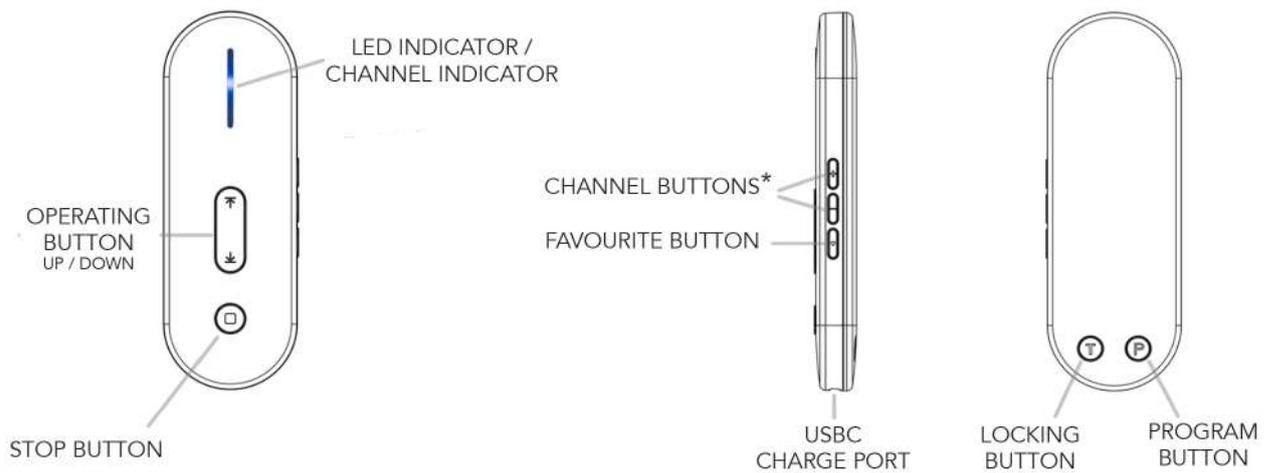

MOTOR HEAD BUTTON OPERATION

* please note that on a single channel remote these channel buttons are present but are not required for operation

Control Blind - UP, STOP & DOWN

Short press the Motor Head Button. Each press will raise, stop or lower the blind.

Add/Remove Controller

Press and hold the Motor Head Button for 2 seconds. The blind will jog and flash orange. Press the PROG button on the remote and the blind will jog. Remote is added/removed.

Bluetooth Connecting

Hold the Motor Head Button for 6 seconds. The motor will jog and flash orange twice. Then it will flash blue. The motor is in Bluetooth mode.

Direction/Reverse

Hold the Motor Head Button for 10 seconds. The motor will jog and flash orange three times. The direction has been reversed.

Reset

Hold the Motor Head Button for 16 seconds. The motor will jog and flash orange four times. All settings are deleted.

Smart Hub Connecting

Hold the Motor Head Button for 2 seconds, the blind will jog and flash orange. Then press 3 times within 10 seconds. The motor will flash blue, motor is in pairing mode.



ADJUSTING UPPER & LOWER LIMITS

Adjusting Upper Limit




Adjusting Lower Limit



ADDING CONTROLLER

Pairing Controller : Power on the motor and then add the controller

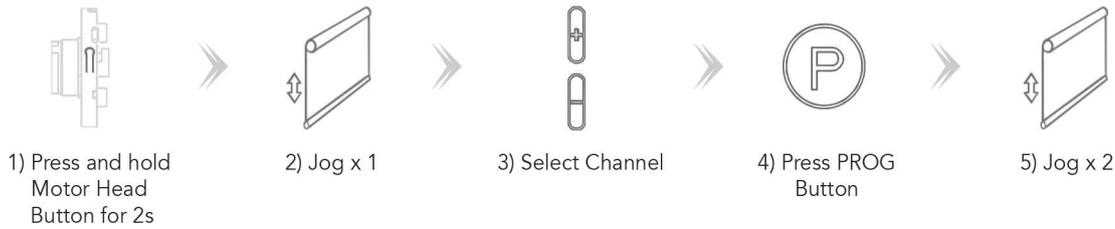


Adding Additional Controller : Add controller B via pre-existing controller A




DIRECTION REVERSE

Checking current direction

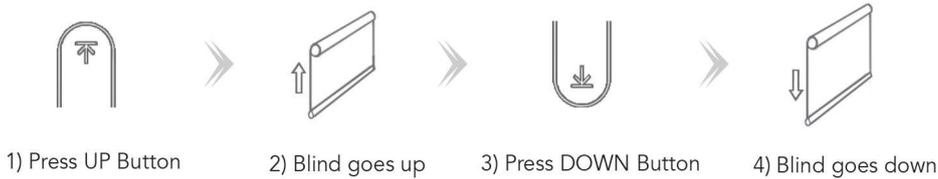

Option 1 : Changing direction if the limits are not set

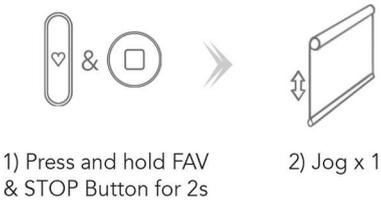

Option 2 : Changing direction if the limits are set



UPPER & LOWER LIMIT SETTING

Setting Upper Limit



Setting Lower Limit



JOG MODE / CONTINUOUS MODE

Same operation is used to move between both modes




SETTING AND CANCELLING FAVOURITE POSITIONS

Setting Favourite Position



Cancelling Favourite Position

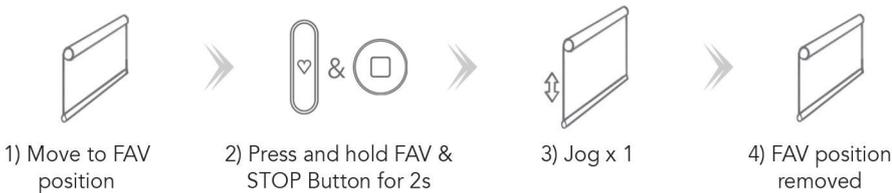


Hot Key for Favourite Position



REMOVE CONTROLLERS


Remove a Single Controller

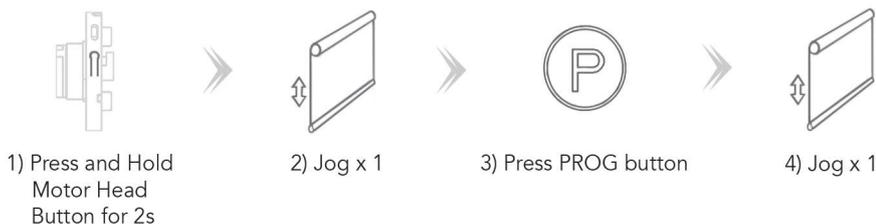

Remove Controller B via Controller A



Remove All Controllers

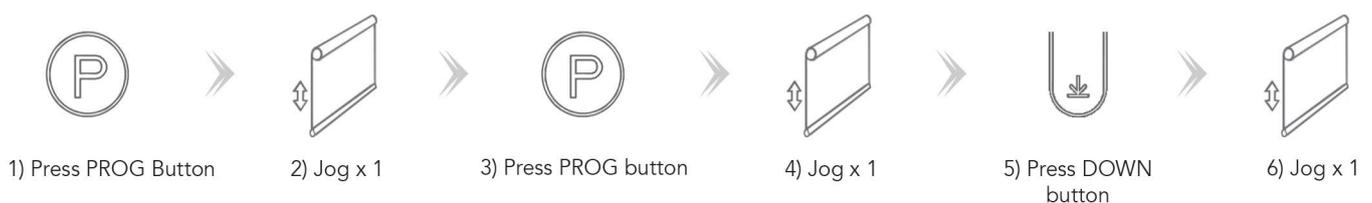

REMOVE ALL LIMITS

Removing all set limits



ADJUST MOTOR SPEED

Increase Motor Speed



Decrease Motor Speed



SOFT START/STOP

Turn Soft Stop/Start On



Turn Soft Stop/Start Off




CHARGING LIGHT ON/OFF

Turn Charging Light On or Off




SLEEP MODE

Entering Sleep Mode

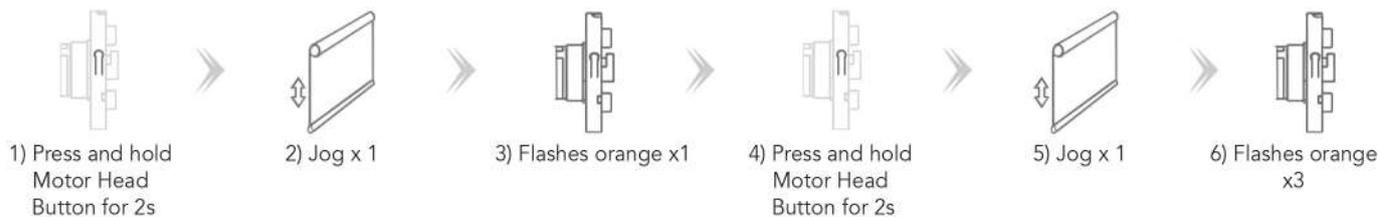


Exiting Sleep Mode

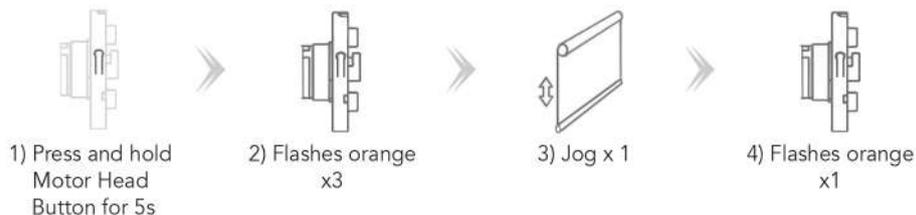


BLUETOOTH CONNECTION

Option 1: Entering Mode with Motor Head

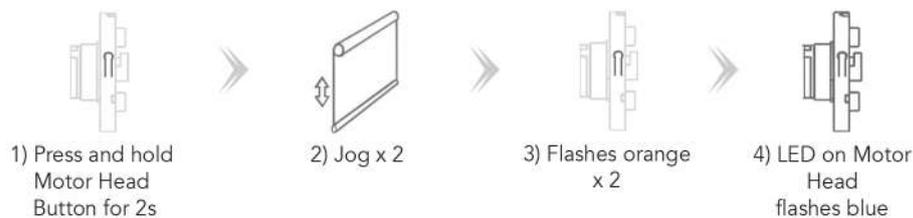


Option 2: Entering Mode with Remote

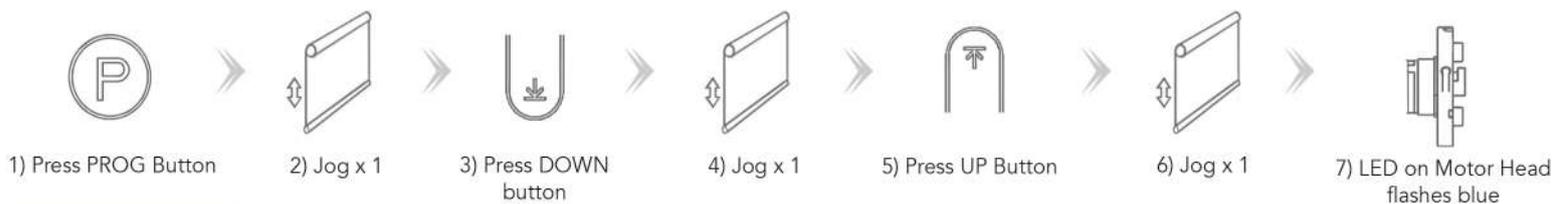

SMART HUB

Option 1: Entering Mode with Motor Head

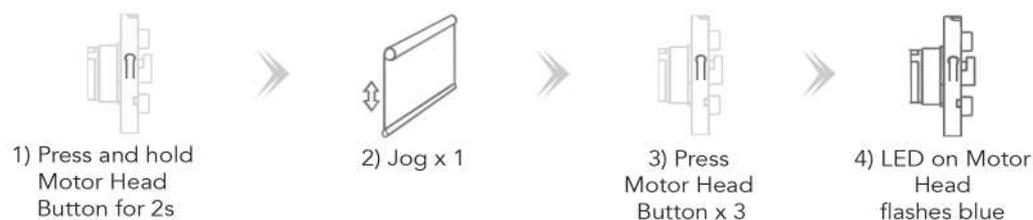

Option 2: Entering Mode with Remote



TROUBLESHOOTING

FAULT	CAUSE	SOLUTION
Motor is not responding	<ul style="list-style-type: none">- Controller not paired- Motor is powered off- Low Battery	<ul style="list-style-type: none">- Add Controller- Hold Motor Head Button for 2 seconds to turn on motor- Charge Motor
Motor stops suddenly	<ul style="list-style-type: none">- Upper and lower Limits not set correctly- Blind exceeds maximum lifting weight- Low Battery	<ul style="list-style-type: none">- Re-set Upper and Lower Limits- Check blind weight- Charge Motor
LED light flashes 8 times on motor head when motor starts	<ul style="list-style-type: none">- Low Battery	<ul style="list-style-type: none">- Charge Motor

Want to connect your blind to Amazon Alexa or Google Home?

Without getting up from your seat, you can filter the daylight, increase your privacy and let daylight in, all at the push of a button. Simply follow the in app instructions to get started.



Have a Home Hub?

You'll find the OneTouch smart hub setup and operating guide on the same Fitting Instructions page where these instructions were located!



NEED A HAND?

We're always happy to help, just drop us an eBay message and we'll come back to you ASAP.

ORDER
BLINDS

