



# Installation Guide

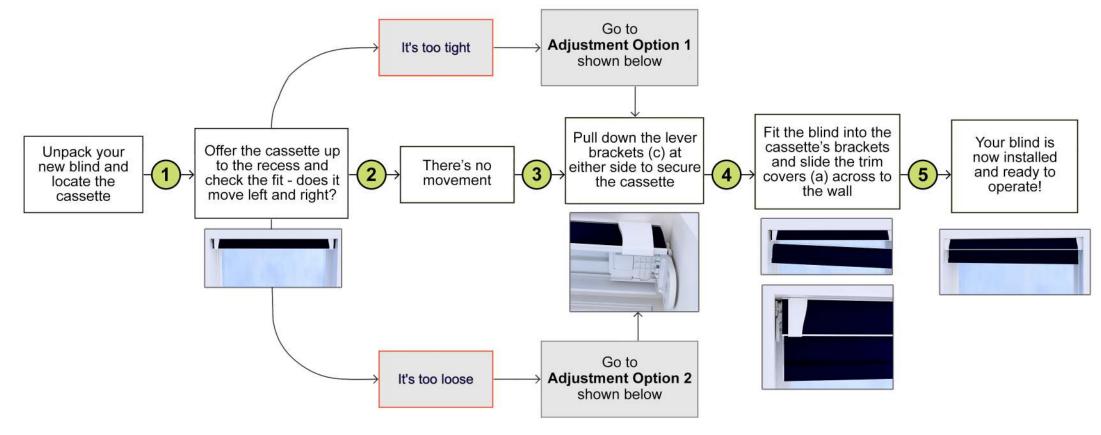

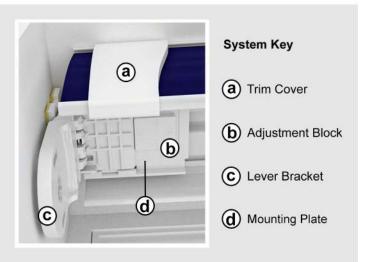



### Adjusting Your Cassette's Fit



#### Adjustment Option 1 - The cassette is too tight

- Slide the lever bracket (c) and mounting plate (d) out of the left side of the cassette.
- You can now access the adjustment block (b) to deduct 1-3mm from the width of the cassette by rotating the block to the -1, -2 or -3 position and replacing it into the mounting plate.
- Push the mounting plate and lever bracket back into the cassette and try it again at the window recess.
- Repeat until the fit is correct, then move to step 3.

#### Adjustment Option 2 - The cassette is too loose

- Slide the lever bracket (c) and mounting plate (d) out of the right side of the cassette.
- You can now access the adjustment block (b) to add 1-3mm from the width of the cassette by rotating the block to the 1, 2 or 3 position and replacing it into the mounting plate.
- Push the mounting plate and lever bracket back into the cassette and try it again at the window recess.
- Repeat until the fit is correct, then move to step 3.



## Watch our Grip Fit™ video guide

Simply scan the QR code to the right or head to our YouTube channel at www.youtube.com/c/OrderBlindsUK to watch our Grip Fit™ installation guide



### Have a query?

Our friendly and knowledgable team are on hand to help via phone or email:



01159 699933



info@orderblinds.co.uk



www.orderblinds.co.uk



### We love seeing our customer's new blinds in action!

Send us a video of your new Grip Fit™ blind being installed or a photo of your blind in its new home and you'll be in with a chance of winning a £50 voucher

Simply tag @orderblinds in your video or photo on social media or email it to marketing@orderblinds.co.uk and once a month we'll pick our favourite to be gifted a voucher towards another blind.

For the best chance of winning use as high quality as you can with the image or film shot portrait (not landscape).