

## Fitting the end caps

Start by putting the plastic covers on to either end of the cassette. These are marked left and right and simply need to be lined up to the grooves on either end of the cassette and pushed into place.

## Fitting the brackets

There are two bracket options for open cassette blinds, face fix and top fix. (as shown on the right)



Face Fix Bracket



Top Fix Bracket

For a blind up to 1 metre wide attach two brackets fitted approximately 75mm (3") from each end of the blind (fig.1). Any intermediate brackets should be spaced evenly between these and as a general rule:

Up to 1m = 2 brackets  
1m to 2m = 3 brackets  
2m to 3m = 4 brackets  
Over 3m = 5 brackets

 
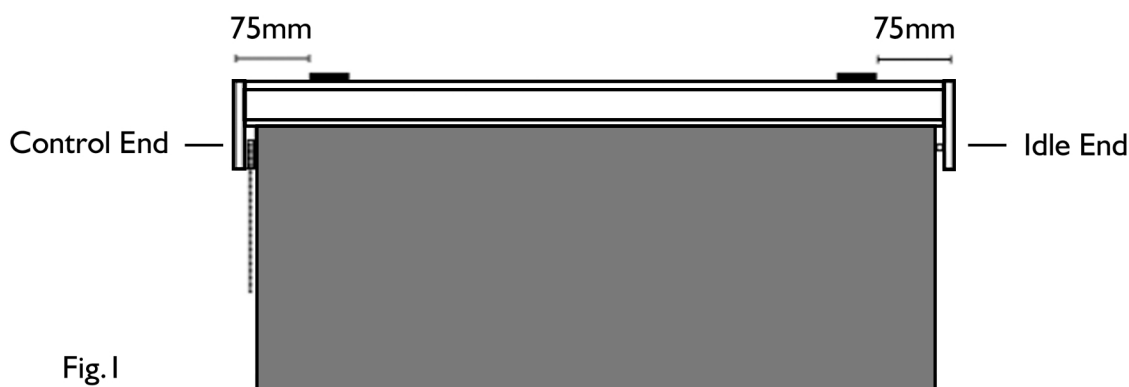 


Fig. 1

The bracket release lip on the bracket must face the back of the blind.

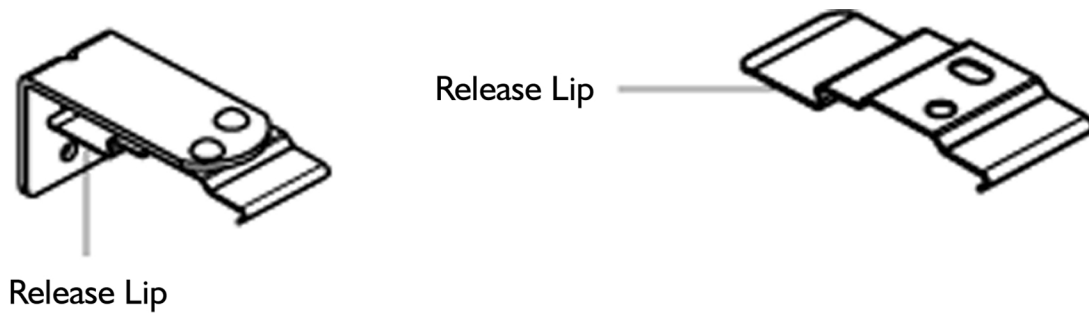

Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

## Fitting the cassette

Once all the brackets are in place offer the blind to the brackets. With the cassette tilted away from you locate the front lip into the bracket and push upwards to click the cassette into the back lip of the bracket.

