




Your new spring loaded blind will arrive pre-assembled, with the blind in place and it's brackets attached to the back bar. You will also receive a number of brackets used to attached the back bar to the wall.

Fitting the brackets

The brackets you will receive can be used for both face fixing and top fixing your new blind.

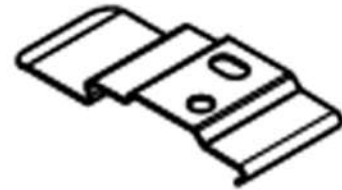

For a blind up to 1 metre wide you should fit two brackets at your window, approximately 75mm (3") from where each end of the blind will be (see Fig.1).

If your blind is over 1 metre wide you will need to fit the two brackets as above, plus additional intermediate bracket(s) which should be spaced evenly between the brackets at either end.

As a general rule you will need:

- Up to 1m = 2 brackets
- 1m to 2m = 3 brackets
- 2m to 3m = 4 brackets
- Over 3m = 5 brackets



Fig.1

The Release Lip on the bracket (shown below) must face the back of the blind.




Mark the hole positions before drilling and plugging if necessary. Use one screw in each bracket, ensuring that the brackets are level.

Remember to allow room for the blind to clear any obstacles when rolled down, such as door or window handles.

Fitting the blind

Once all the brackets are in place offer the blind up to the brackets. With the back bar tilted away from you locate the front lip into the bracket and push upwards to click the back bar into the back lip of the bracket.

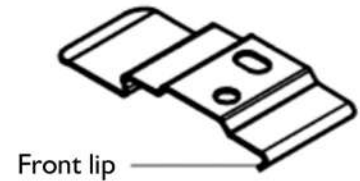

Once clicked into place this completes the installation of your blind.

Adjusting the blind tension

When making your blind our team will set the blind tension for you, but you can either add more or remove some tension if you wish. You may need to take down the blind depending where it has been fitted in order to access the ends of the brackets.

First slide the plastic covers off the brackets to reveal the adjustment head.

Now simply take a flat head screwdriver and turn the adjustment head as follows:

Turn **clockwise to add** tension

Turn **anti-clockwise to release** tension



PLEASE NOTE - We recommend making only a half turn at a time before testing the new tension as adding too much tension can snap the spring in the blind and make it unusable. For the same reason we do not advise the use of an electric screwdriver as this makes it easy to overwind.

Adjusting the top limit

The top limit is the point where the blind stops when released to open fully. When making your blind our team will set a top limit for you, but you can change it if you wish.

You may need to take down the blind depending where it has been fitted in order to access the ends of the brackets.



First slide the plastic covers off the brackets to reveal the adjustment head.

Now simply take a flat head screwdriver and turn the adjustment head as follows:

Turn **clockwise to lower** the top limit

Turn **anti-clockwise to raise** the top limit