


WHAT IS NEEDED

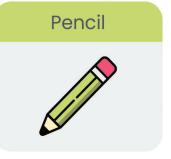








WHAT IS INCLUDED

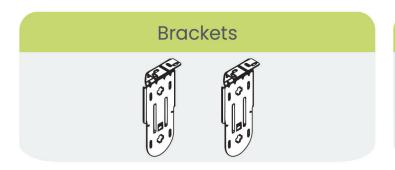



IMPORTANT INFORMATION


Be careful when opening packaging so as not to damage the fabric.

Please note, this blind is not suitable for side fixing and should only be top or face fixed.

Before installation, check the material of your window recess or surround - is it plaster, wood, metal or masonary? Each require specific drill bits and rawl plugs to ensure a secure fit. Using the correct tools make installation easier and ensures a secure fit.

FITTING THE BRACKETS


1

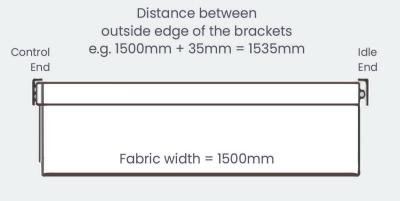

- 1. To work out the distancerequired between each bracket you will need to first measure the fabric width, e.g. 1500mm. Add to this an allowance for the control and idle enf of 33mm, e.g. = 1535mm.
- 2. 1535mm would be the measurement from the outside of one bracket to the outside of the other bracket.




Outside the recess 1535mm

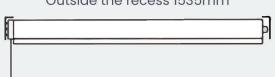

- 3. Use this figure to position the outside of your brackets accordingly whether inside of the recess or outside if the recess.
- 4. Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles


FITTING THE BLIND

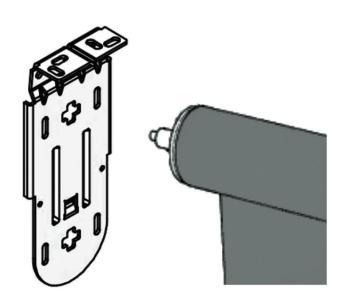

Once the brackets have been fitted the blind can be inserted into the brackets. Note - for concentional roller blinds the fabric comes down form the back of the roller blindand for reverse roll blinds the fabric hangs from the front of the blind.

With the fabric rolled around the tubes, offer the idle end (the end with the pin) into the idle end of the bracket. Note - we advise the blackout blind in the top position and the sheer/sunscreen roller in the bottom position. As standard, the blackout will be reverse roll with fabric rolling off the front and the sheer/sunscreen will be standard roll with the fabric rolling off the back.

With the idle end in place offer the control end to the opposite bracket and secure the blind in place ensuring that the centre lug has dropped into the slot of the bracket.

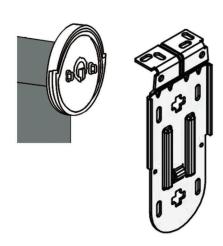

4

You must install the included safety device in line with UK child safety legislation, to ensure there is no hazard caused by a free hanging loop.


The device complies with general product safety regulations BS EN 16434.






Scan the QR code to watch our video installation guide, or follow the step by step instructions below:



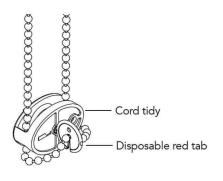


- The safety device will arrive with a disposable red tab installed.
 To remove this, simply slide the chain out of the slot and then pull the red tab out of the device.
- Position the cord tidy on the wall at the furthest distance below the tube as possible.

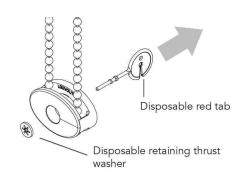

Make sure that you are adding appropriate tension to the chain so it no longer hangs loosely, then mark the location of the central hole.

- 3. Split the cord tidy and mark the remaining offset hole position too, before drilling and plugging both location holes if necessary. Screw into the offset hole only to fix the back piece of the cord tidy to the wall.
- 4. Re-assemble the cord tidy with the chain and push it into place, then install a screw through the centre hole before putting the cover cap over the screw hole to complete the installation.

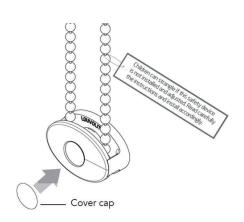



We'd love to see how your new blinds look in your home! Share your photos with us on social media, and don't forget to tag us *@orderblinds*.

Your stylish design could be featured on our page to inspire other customers. Whether it's a bold statement or a subtle touch, your space could be the perfect inspiration for others looking to refresh their home.

Please note, our opening hours are:

Monday - 9:00am - 5:00pm Tuesday - 9:00am - 5:00pm Wednesday - 9:00am - 5:00pm Thursday - 9:00am - 5:00pm Friday - 9:00am - 3:00pm





