

WHAT IS NEEDED









WHAT IS INCLUDED





IMPORTANT INFORMATION

Be careful when opening packaging so as not to damage the fabric. Depending on the width of your blind, it will be made on either a 32mm or 40mm diameter tube. Depending which it is, you will receive one of two style of bracket as shown above.

Please note, this blind is not suitable for side fixing and should only be top or face fixed.

Before installation, check the material of your window recess or surround - is it plaster, wood, metal or masonary? Each require specific drill bits and rawl plugs to ensure a secure fit. Using the correct tools make installation easier and ensures a secure fit.

FITTING YOUR BLIND

1



FITTING INSIDE RECESS

Firstly decide whether to face fix or top fix your blind. We recommend you top fix your blind within the recess to avoid drilling into the window frame or its surround. If there are obstructions like handles, make sure you leave enough space for the blind to be lowered without hitting them. A


FITTING OUTSIDE RECESS


Follow these measurement steps to ensure that the centre of your roller blind is exactly in the middle of your window. The measurements at either end of the recess (C) need to be the same. To work out C:

- measure the width of the window (measurement B) Write down the measurement.
- Measure the width of the blind (measurement A). Write down the measurement.
- Take measurement B away from measurement A and divide the answer by 2 to get measurement C.

MARKING THE BRACKET POSITIONS

2

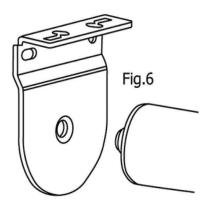

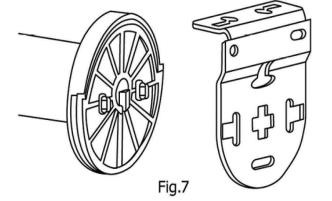

MARK THE BRACKET POSITIONS

Place the blind into the corresponding ends of the brackets as illustrated, then offer the blind into position where you'd like to fix it in your window. Mark the positions of the 2 holes per bracket for fixing and drilling.

Use the appropriate wall plugs and use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles such as window handles and vents when operated.

Once your brackets are securely fitted, the blind can be offered up and installed as shown in step 2. On standard roll blinds the fabric rolls off the back closest to the windows. On reverse roll blinds the fabric rolls off the front into the room.

FITTING CHILD SAFETY DEVICE

4

You must install the included safety device in line with UK child safety legislation, to ensure there is no hazard caused by a free hanging loop.


The device complies with general product safety regulations BS EN 16434.





Scan the QR code to watch our video installation guide, or follow the step by step instructions below:




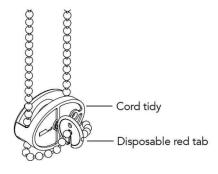


- The safety device will arrive with a disposable red tab installed.
 To remove this, simply slide the chain out of the slot and then pull the red tab out of the device.
- Position the cord tidy on the wall at the furthest distance below the tube as possible.



- 3. Split the cord tidy and mark the remaining offset hole position too, before drilling and plugging both location holes if necessary. Screw into the offset hole only to fix the back piece of the cord tidy to the wall.
- 4. Re-assemble the cord tidy with the chain and push it into place, then install a screw through the centre hole before putting the cover cap over the screw hole to complete the installation.

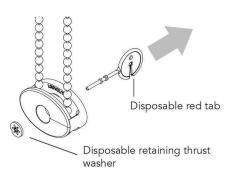

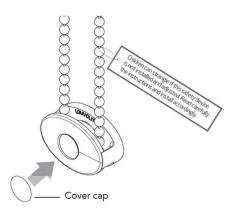

We'd love to see how your new blinds look in your home! Share your photos with us on social media, and don't forget to tag us *@orderblinds*.

Your stylish design could be featured on our page to inspire other customers. Whether it's a bold statement or a subtle touch, your space could be the perfect inspiration for others looking to refresh their home.

Please note, our opening hours are:

Monday - 9:00am - 5:00pm Tuesday - 9:00am - 5:00pm Wednesday - 9:00am - 5:00pm Thursday - 9:00am - 5:00pm Friday - 9:00am - 3:00pm

> Order Blinds Online Ltd Unit 10, Barbrey Business Park, Orston Lane, Bottesford Leicestershire NG13 0GY

ORDER BLINDS



