



Vertical Blind

Fitting Guide

A Comprehensive Guide For Fitting Your New
Vertical Blind

ORDER
BLINDS




WHAT IS NEEDED

Tape Measure



Drill

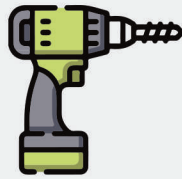


Pencil




WHAT IS INCLUDED

Brackets




Top Fix Bracket

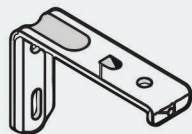

Face Fix Bracket

Screws

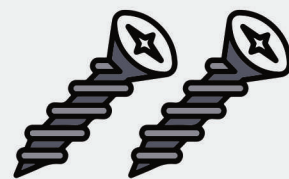

IMPORTANT INFORMATION


Be careful when opening packaging so as not to damage the fabric.

Please note, this blind is not suitable for side fixing and should only be top or face fixed.


Before installation, check the material of your window recess or surround – is it plaster, wood, metal or masonry? Each require specific drill bits and rawl plugs to ensure a secure fit. Using the correct tools make installation easier and ensures a secure fit.

FITTING THE BRACKETS

1

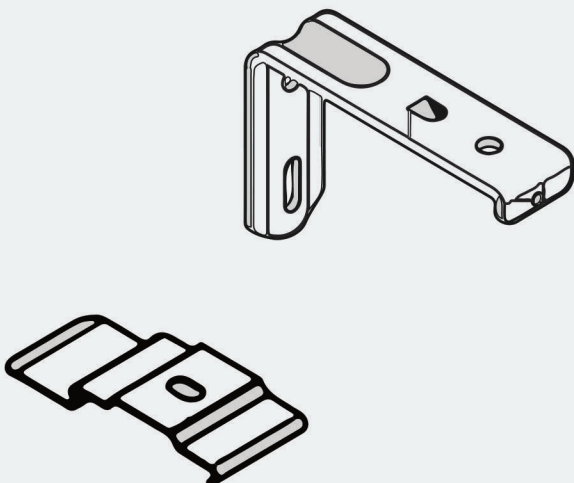

The brackets should be fitted to the ceiling or window frame allowing enough room for the depth of the vanes to turn fully. Please allow a minimum of 5.5cm of space behind the brackets so the blind can be operated without obstruction.

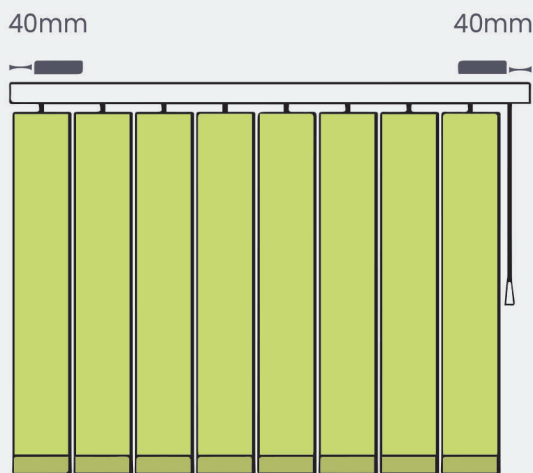

FITTING THE BRACKETS


For a blind up to 1 metre wide, attach two brackets fitted approximately 40mm (1 1/2") from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule:

Up to 1.5m = 2 brackets
 1.5m and 2.7m = 3 brackets
 2.7m + = 4 brackets

Mark the bracket hole positions before drilling and plugging if necessary – make sure to use the correct wall plugs for your chosen place of fitting. Use two screws for face fix brackets and one screw in a top fix bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles such as door or window handles, when the slats are tilted.


FITTING THE HEADRAIL

2

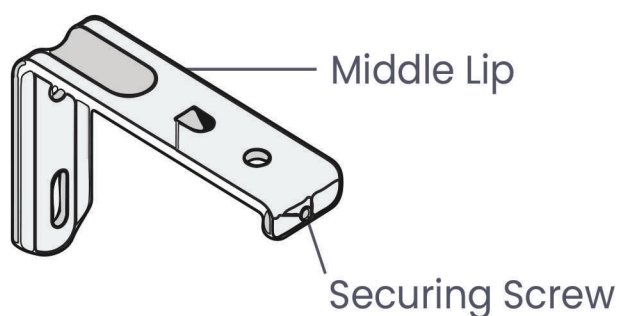

If using a face fix screw bracket, locate the blind with the groove on the back of the headrail and fit it into the middle lip of the bracket. Now push the blind upwards until the headrail is sitting level on the bracket before tightening the securing screw from the front of the blind. Do not over tighten these screws, it is unnecessary and may damage the track.

If using a top fix spring clip bracket you should push the track upwards then tilt away from you to locate the spring bracket front lip into the front groove on the track. Push upward and the track will click into place.

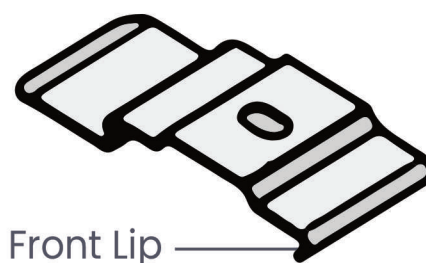

FITTING THE LOUVRES/VANES

3

Turn the hooks on the carriers of the track so that the slots are at 90 degrees to the track. Hang the louvres and ensure the seams are all facing the same direction. The blind is now ready to operate.

FITTING CHILD SAFETY DEVICE


4

If you have chosen the cord and chain operation method, you must install the included safety device in line with UK child safety legislation.

The device complies with general product safety regulations BS EN 16434.




Scan the QR code to watch our video installation guide, or follow the step by step instructions below:

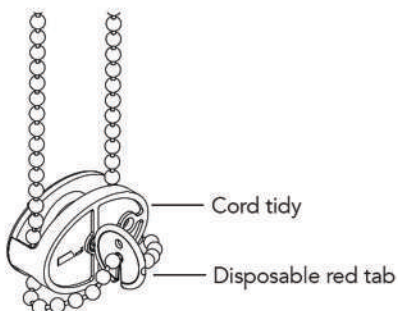

The safety device will arrive with a disposable red tab installed. To remove this, simply slide the chain out of the slot and then pull the red tab out of the device.


Position the cord tidy on the wall at the furthest distance below the tube as possible.

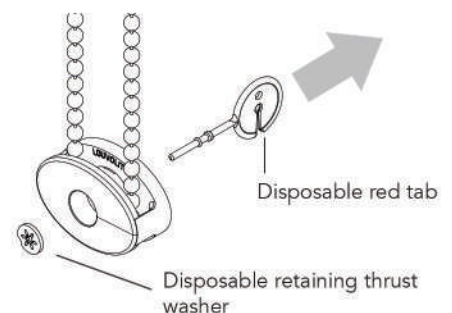

Make sure that you are adding appropriate tension to the chain so it no longer hangs loosely, then mark the location of the central hole.

3. Split the cord tidy and mark the remaining offset hole position too, before drilling and plugging both location holes if necessary. Screw into the offset hole only to fix the back piece of the cord tidy to the wall.

4. Re-assemble the cord tidy with the chain and push it into place, then install a screw through the centre hole before putting the cover cap over the screw hole to complete the installation.

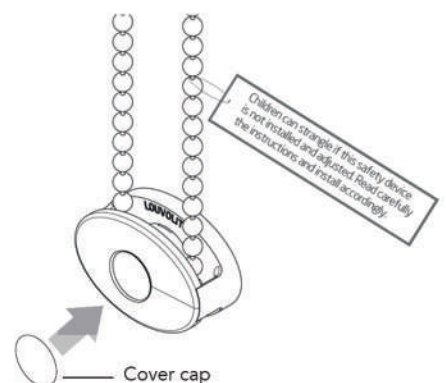

ADDITIONAL INFORMATION

5

We'd love to see how your new blinds look in your home! Share your photos with us on social media, and don't forget to tag us **@orderblinds**.

Your stylish design could be featured on our page to inspire other customers. Whether it's a bold statement or a subtle touch, your space could be the perfect inspiration for others looking to refresh their home.

Please note, our opening hours are:

Monday - 9:00am - 5:00pm

Tuesday - 9:00am - 5:00pm

Wednesday - 9:00am - 5:00pm

Thursday - 9:00am - 5:00pm

Friday - 9:00am - 3:00pm

Order Blinds Online Ltd
Unit 10, Barbrey Business Park,
Orston Lane, Bottesford
Leicestershire NG13 0GY

ORDER
BLINDS 



0115 9699933



info@orderblinds.co.uk