



Brackets

There are two ways to install your roman blind - either top fixing or face fixing.

The bracket for both is the same, it is where you install the screws that will differ.

Option 1 - Top Fix



Option 2 - Face Fix (Topside View)



Face Fix (Underside View)



Getting started

YOU WILL NEED:

- A drill with correct bit
 - A metal tape measure
 - A pencil
- Your brackets are packed separately in the box. Please ensure you've located them before disposing of the packaging.
 - The brackets are a universal type that can be used to top fix the blind into a recess or face fix into a frame or a wall.
 - Please read the following instructions carefully before you start fitting your blind.

1

Fitting the brackets:


Roman blinds come with a set of swivel brackets. The larger the blind gets, the more of these you may have.

Decide how you want to fit; you can choose from top-fixing or face-fixing.

A note on top fixing:

The blind depth, from the back of the bracket to the front of the headrail, is approximately 4.5cm. The fabric on top of this can add around 0.5-1cm.

- 1) Measure and mark the distance from the window (measurement D shown in the illustration below) where you'll be fitting the brackets, allowing room for any obstructions like window handles.

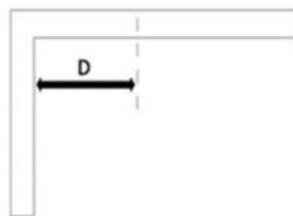

- 2) It is best to install the brackets starting from 110mm from the ends of the headrail to start, spacing them evenly across window for even support across the width of the headrail. Hold each bracket in place and mark the hole positions.
- 3) Using the appropriate drill bit for the material your window recess is made from, drill the holes and install the brackets in the positions you have marked.

2

Fitting the headrail and blind:

Your blind has a Velcro part that sticks onto the headrail - we recommend removing the top of the blind from the headrail so you can see what you're doing with the brackets for this next step.

The swivel brackets that come with your blind will have a slight lip that slots into the top of the headrail, near the front.

- 1) Use a gentle swing motion to slot your headrail into place. You may need to angle the blind slightly. Ensure the front arm is opened counter-clockwise for the next step.



- 2) Once you have done this, with the brackets & headrail sitting nicely in place, swing the arm to the left, ending in a closed position. This will keep the blind locked into place. Don't be afraid to use a little bit of force if you need to with this step.
- 3) Finally, Velcro the top of your roman blind into place, hiding the brackets arm from the front.

All blinds present a possible strangulation risk due to their cords and chains.

Make sure that all cords and chains are kept away or out of reach of small children, vulnerable people and pets.

Always ensure you install all safety devices that come with the blind immediately after fitting.

Move beds, cots and climbable furniture away from windows.



**make it
safe**

Chain Release Unit

When 6kg's of weight is applied the chain will release.



Your blind has been supplied with a control chain release unit that breaks when pulled with over 6KG of pressure.

This chained device needs to be installed no less than 60CM from the floor. There is no need for a wall-installed safety device for this type of operation. These blinds have been tested to BSEN16433:2014 and BSEN1634:2014 standard.

The raise cords/tapes used at the back of the blind also feature safety break points, which are also designed to snap under pressure. Simply clip the back break points back together if this happens.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

