


**When your blind arrives, the motor will be in 'sleep mode'.
Once you have installed the blind, wake it up by following these steps:**

Using a thin, blunt object such as an unfolded paper clip, briefly press the indented button on the side of the motor, as shown in the diagram to the right. Don't hold down the button!

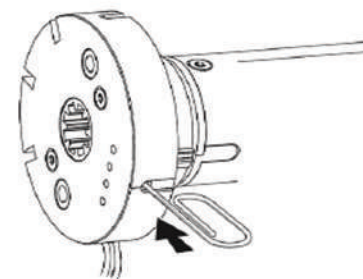

The blind will then move up and down slightly - aka 'jog' - to confirm that the motor is awake and ready to operate.

Now your blind is awake, test the remote. The upper and lower limits will already be set for you, but you might want to fine tune them to perfection:

Adjustment of the lower blind stopping position

Press the Down button and send the blind to the lower stopping position.



Press and hold the Up and Down buttons until the blind jogs up & down.



Press the Up or Down buttons to adjust the blind to the new stopping position.



Press and hold the Stop button until the blind jogs up & down.



New lower stopping position set

Adjustment of the upper blind stopping position

Press the Up button and send the blind to the upper stopping position.



Press and hold the Up and Down buttons until the blind jogs up & down.



Press the Up or Down buttons to adjust the blind to the new stopping position.



Press and hold the Stop button until the blind jogs up & down.




New upper stopping position set

You can also set and save a 'favourite' position at a certain limit:

Setting the blind Intermediate position

Use the control to adjust the blind to an intermediate position and press the Stop button.



Press and hold the Stop button until the blind jogs up & down.



Intermediate position set

Deleting the blind Intermediate position

Send the blind to the intermediate position by pressing the Stop button.



Once the blind has stopped at the intermediate position, press and hold the Stop button until the blind jogs up & down.



Intermediate position deleted

Using the Intermediate position

The blind must be stationary, but can be at any position.

Press the Stop button to activate the intermediate position.



The blind will automatically move to the intermediate position and stop.

